

CONTENTS

***Section 1* General Information**

- Introduction, 1-1
- Warnings, Cautions, and Notes, 1-3
- Specifications, 1-4

***Section 2* Installation Instructions**

- 2.1 BK117 C-2 Manual Release Cable Installation, 2-1
- 2.2 BK117 D-2 Master Cylinder Assembly Installation, 2-3
- 2.3 Suspension Installation, 2-10
- 2.4 Manual Release Cable Connection and Adjustment, 2-14
- 2.5 Load Weigh System Installation, 2-16
- 2.6 Installation Check-out, 2-17
- 2.7 Component Weights, 2-17

***Section 3* Operation Instructions**

- 3.1 Pre-flight Check, 3-1
- 3.2 Cargo Hook Loading, 3-3
- 3.3 Cargo Hook Rigging, 3-4

***Section 4* Load Weigh Systems Operation Instructions**

- Indicator Front Panel, 4-1
- The Run Mode, 4-2
 - To Zero or Tare the Display, 4-3
 - To Un-Zero the Display, 4-3
- Error Codes, 4-4
- The Setup Mode, 4-5
 - Indicator Damping, 4-7
 - To look at, or change the damping level, 4-7
 - Indicator Calibration, 4-8
 - To look at or change the calibration code, 4-8
 - Installation Zero, 4-9
 - To run the installation zero routine, 4-9
 - Calibration by Lifting a Known Weight, 4-9
 - To run calibration by known weight routine, 4-10
 - Setting the Scale on a Remote Analog Meter, 4-11
 - To look at or change the scale, 4-11
 - Select KG or LB Units, 4-12
 - To look at or change the units, 4-12
- Indicator Version, 4-13